



Door Handle/Manilla de puerta

INSTALLATION GUIDE / GUÍA DE INSTALACIÓN

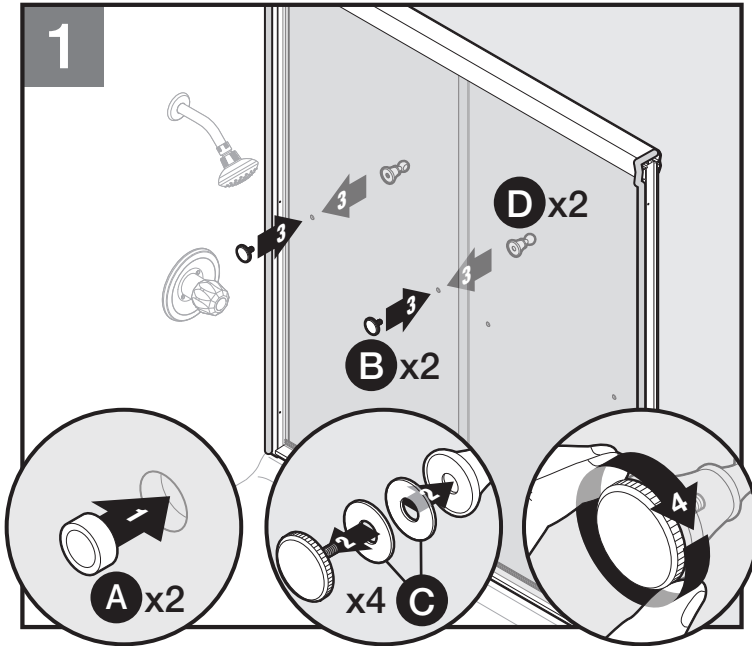

Install bushings (A) into pre-drilled holes in outer shower door. Insert a rubber gasket (C) to handle post (B) and escutcheon (D). Install escutcheons into bushings in pre-drilled holes in shower door. Secure escutcheons manually. **IMPORTANT: DO NOT** overtighten. Using tools to tighten is not recommended.

Instale manguitos (A) en los orificios pretaladrados en la puerta exterior de la ducha. Inserte una junta de caucho (C) para manipular la patilla (B) y el escudete de los tornillos (D). Instale los escudetes en los manguitos instalados en los orificios pretaladrados de la puerta de la ducha. Fije los escudetes manualmente. **IMPORTANTE: NO** apriete excesivamente. No se recomienda el uso de herramientas para apretar.

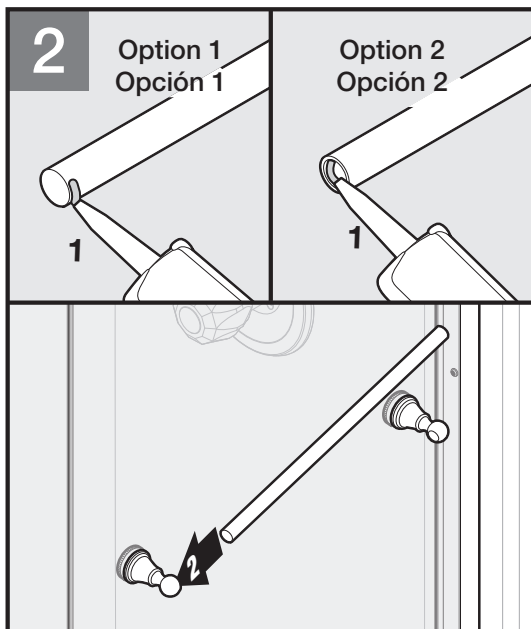

Option 1: For handles that insert INSIDE the post ends, apply a thin bead of silicone sealant onto the OUTSIDE bottom 1/4-inch of one end of the handle bar before inserting into the handle post. Next, install the second handle post and repeat the sealant steps. Wipe away excess sealant immediately. See sealant manufacturer's instructions for cure time, cleaning, safety and handling instructions.

Option 2: For handles that insert OUTSIDE the post ends, apply a thin bead of silicone sealant onto the INSIDE bottom 1/4-inch of one end of the handle bar before inserting into the handle post. Next, install the second handle post and repeat the sealant steps. Wipe away excess sealant immediately. See sealant manufacturer's instructions for cure time, cleaning, safety and handling instructions.

Opción 1: La barra o la manija que se instalan por dentro de los postes, aplique una gota delgada de sellador de silicona en la parte inferior EXTERNA a 1/4 de pulgada (0.6 cm) de uno de los extremos de la barra para toallas antes de insertarla en el poste de la manilla. A continuación, instale el segundo poste de la manilla y repita los pasos con el sellador. Limpie inmediatamente cualquier exceso de sellador. Consulte las instrucciones del fabricante del sellador para ver los tiempos de secado y las instrucciones de limpieza, seguridad y manejo.

Opción 2: La barra o la manija puede ser instalado fuera de los postes, aplique una gota delgada de sellador de silicona en la parte inferior INTERNA a 1/4 de pulgada (0.6 cm) de uno de los extremos de la barra para toallas antes de insertarla en el poste de la manilla. A continuación, instale el segundo poste de la manilla y repita los pasos con el sellador. Limpie inmediatamente cualquier exceso de sellador. Consulte las instrucciones del fabricante del sellador para ver los tiempos de secado y las instrucciones de limpieza, seguridad y manejo.